 





BRAKE HOSE ROUTING UK GAME 150/160




Step #1 :

Remove the system controller from the bike

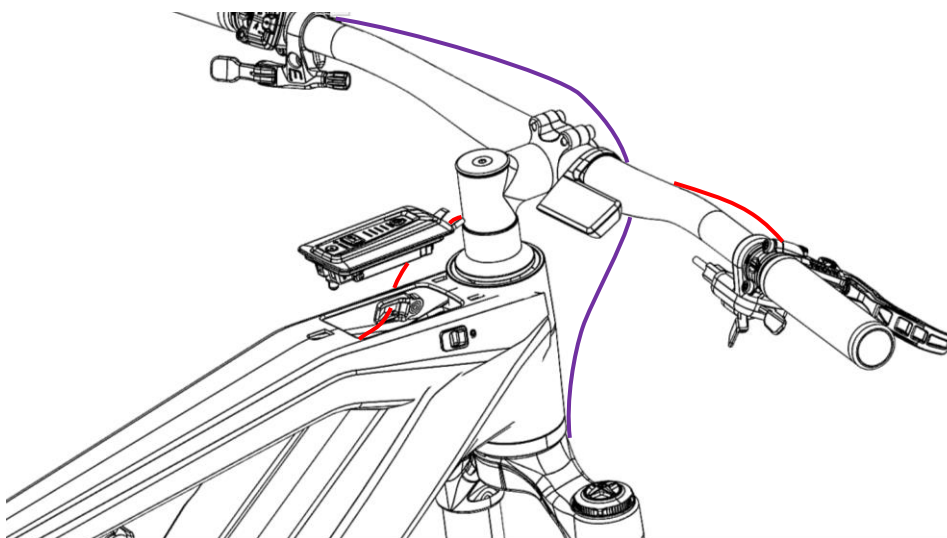

Step #2 :

Disconnect the hoses brake from both levers

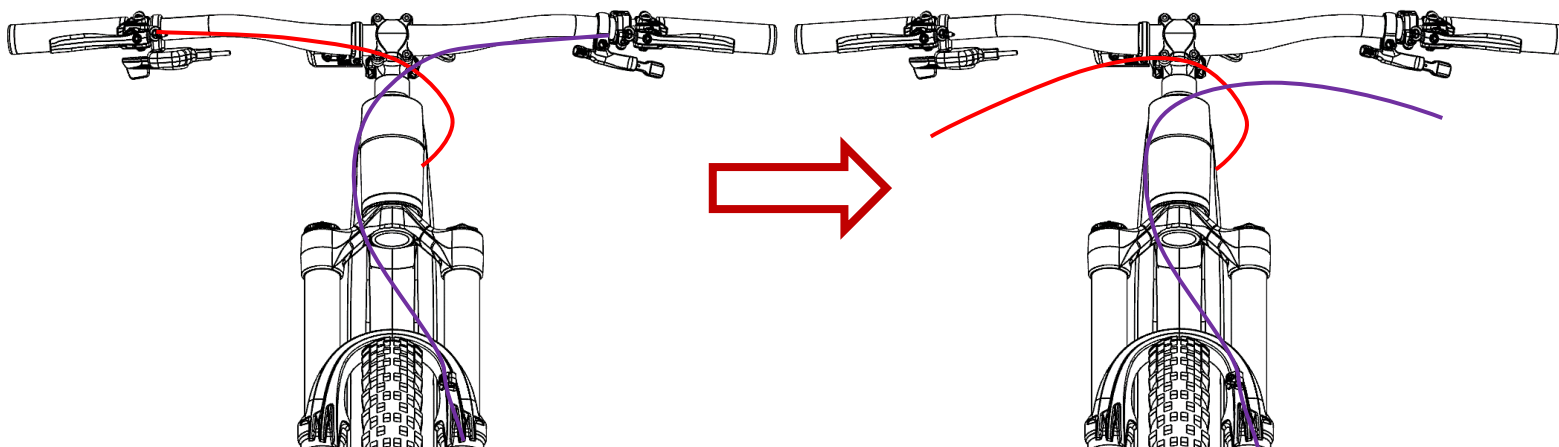

MOUSTACHE BIKES - SAS CYCLE ME // ZONE INOVA - 5 ALLÉE 2 - 5, RUE DU RUISSEAU // 88150 THAON-LES-VOSGES // FRANCE

MOUSTACHE
BIKES


www.moustachebikes.com

BOSCH
ePowerd



- Front brake
- Rear brake


Step #3 :
 Connect front brake to the right brake lever

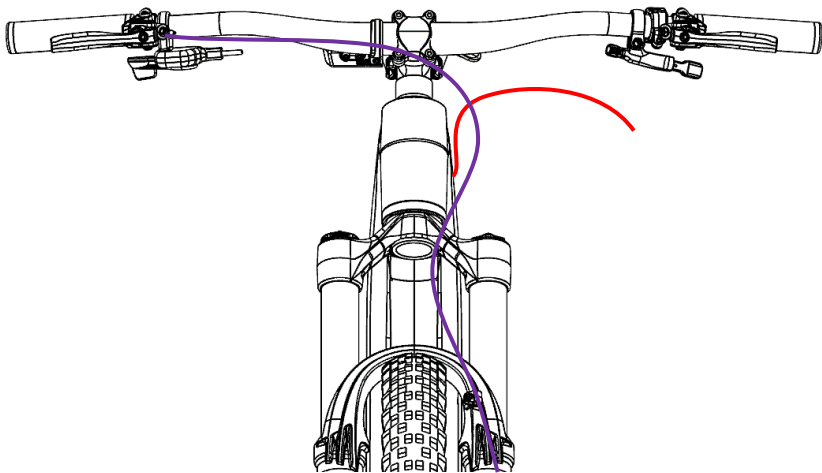

Step #4 :
 Switch the exit side of the rear brake hose in the Top-tube



Game 150.8, 160.8, 160.9
 Replace the cable inlet
 mounted on the bike with the
 cable inlet supplied in the
 accessory box (2-room cable
 inlet).

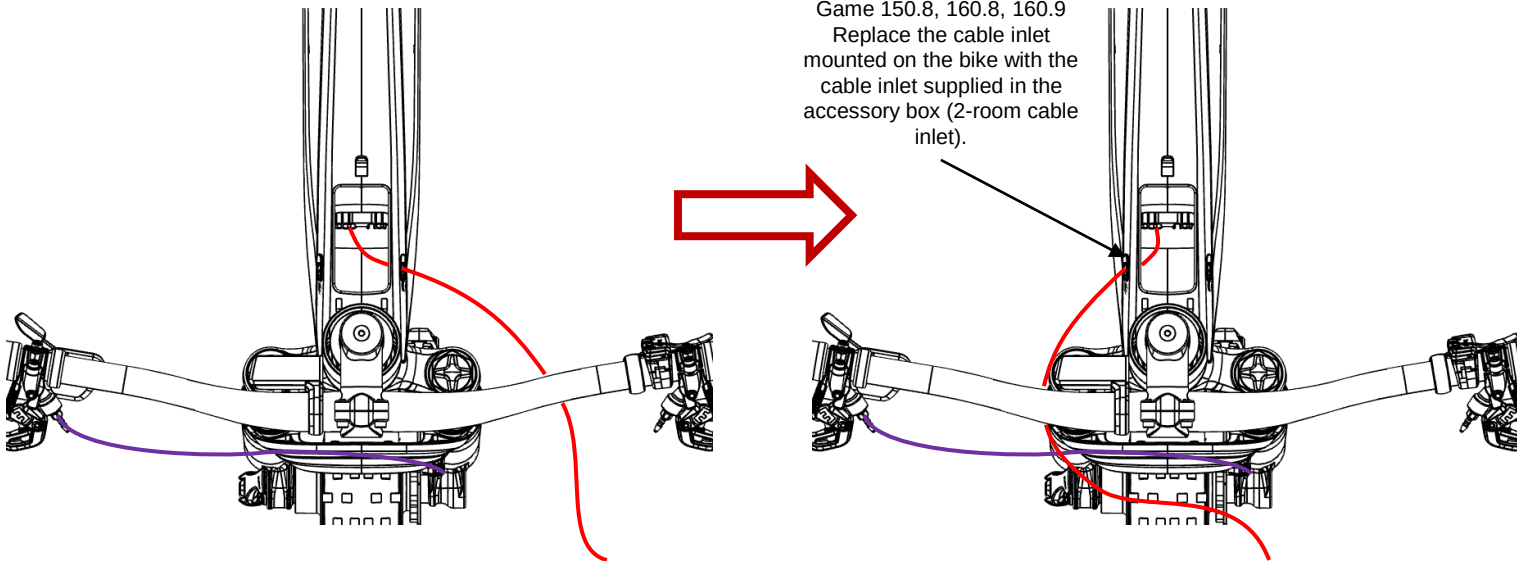


MOUSTACHE BIKES - SAS CYCLE ME // ZONE INOVA - 5 ALLÉE 2 - 5, RUE DU RUISSEAU // 88150 THAON-LES-VOSGES // FRANCE





- Front brake
- Rear brake

Step #3 :
Connect the rear brake to the left brake lever

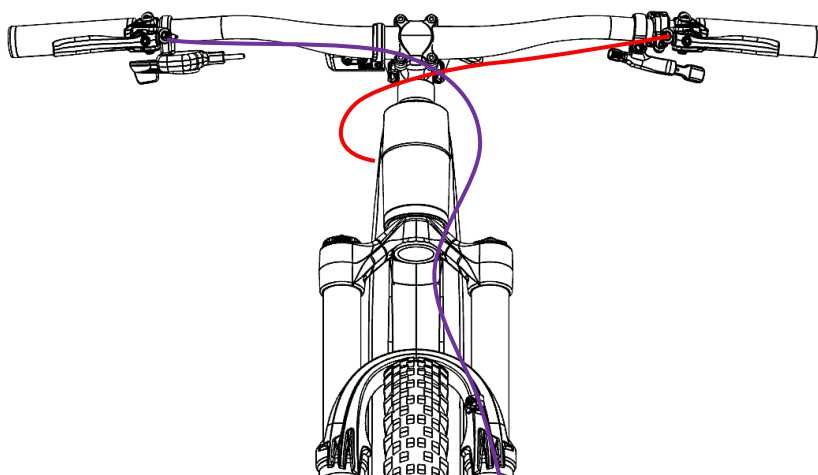

MOUSTACHE BIKES - SAS CYCLE ME // ZONE INOVA - 5 ALLÉE 2 - 5, RUE DU RUISSEAU // 88150 THAON-LES-VOSGES // FRANCE