 



Beam Plot

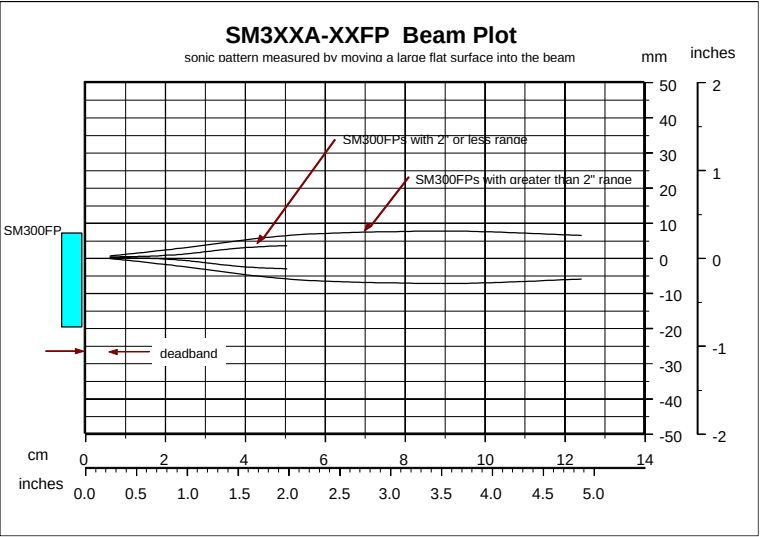

Mounting / Alignment

Mount the sensor such that the surface of the object to be detected is approximately centered within the sensor’s sensing field. Mount the sensor firmly to avoid vibration. The sensor face should be parallel to the liquid or material surface and free of air currents. For best results in sensing small objects, for sensors of the appropriate sensing range mount the sensor about 38.1 mm (1.50 in.) away from the object.

 Wiring Connections, Cable Model

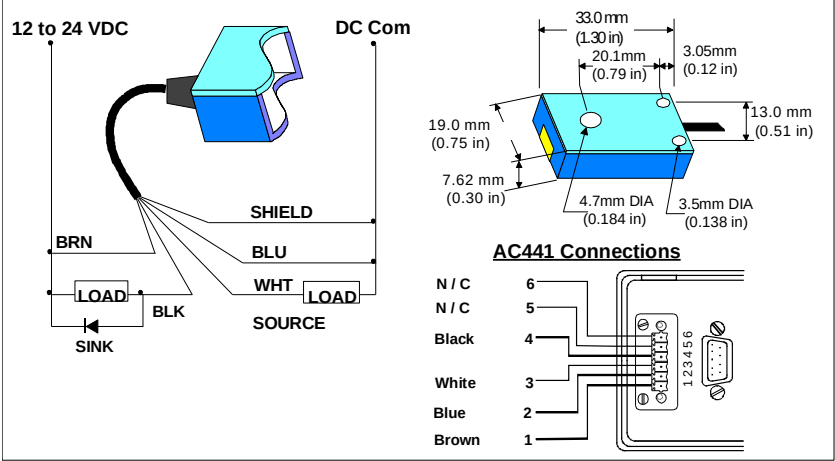


Indicator LED's

Amber LED: ON when object is sensed.
Green LED: ON when object is not sensed.


Accessories

- Model AC246 Mounting Bracket, Right Angle
- Model AC247 Conveyor Rail Clamp/Bracket Set
- Model AC441A Handheld Configurator & SUPERPROX+ S/W

 Mounting Bracket Dimensions

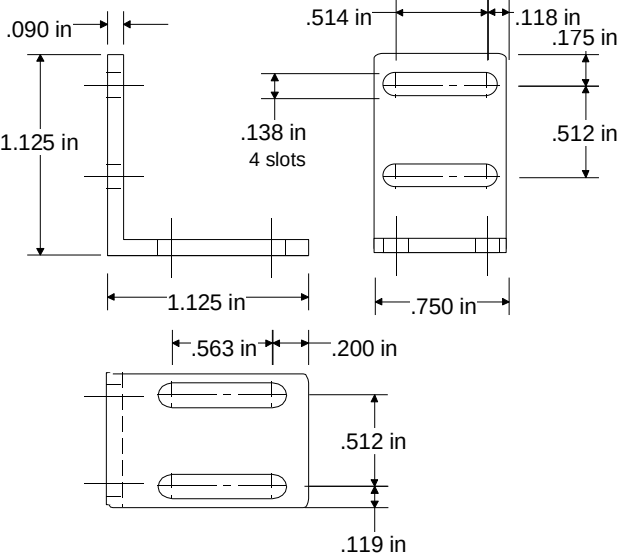

AC246 - Right Angle Bracket

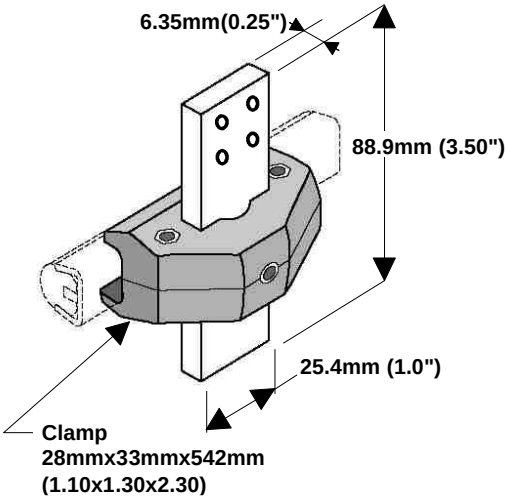 

AC247 - Conveyor Rail Clamp / Bracket

Literature and application engineering assistance are provided by Hyde Park and its authorized distributors to aid the customer in selecting the product for an application. The customer, however, is responsible for determining the suitability of the product in the application.